Camera Check

-Open Device Manager by searching "Device Manager" at the bottom left next to the windows button



-Once done so Search for Cameras on Device Manager and make sure you have 2 Cameras on the drop down.

🗄 Devi	ce Manager	_	×
File A	ction View Help		
⇔ ⇒	III 📴 🗾 III 💭 💺 🗙 💽		
✓ 書 E	00125CG7386X8X		
> #	Audio inputs and outputs		
> ¥	Batteries		
> 4	Bluetooth		
~ 9	Cameras		
	🕼 HP HD Camera		
> -	Computer		
> =	Disk drives		
> 4	Display adapters		
>	Firmware		
> 🕅	Human Interface Devices		
> =	IDE ATA/ATAPI controllers		
>	Exploards		
> [Memory technology devices		
> (Mice and other pointing devices		
> 🗖	Monitors		
> 🛓	Network adapters		
~ ¥	D Other devices		
	😰 Unknown device		
	😰 Unknown device		
> 🖻	🔋 Print queues		
> C	Processors		
>	Proximity devices		
>	P Security devices		
>	Software devices		
i	Sound video and name controllers		

-If only one camera is showing, click on scan for hardware changes to re install the camera or any other device.



-If you have 2 cameras and still no signal double click on the camera and open the "Driver" tab at the top. There make sure "Device is Enabled"

